



BOSCH

Register your
new device on
MyBosch now and
get free benefits:
[bosch-home.com/
welcome](https://bosch-home.com/welcome)



Maxo**Mixx**

MSM8

[en]

Instruction manual

Accessories (Hand blender)

For your safety

This accessory is designed for the hand blender MSM8... .

Follow the operating instructions for the hand blender.

The accessories are suitable only for the use described in these instructions.

Safety instructions for this appliance

Risk of injury from sharp blades/rotating drive!

The universal cutter must be completely assembled before use!

Never grip the blade in the universal cutter.

Take hold of the universal cutter blade by the plastic handle only.

Never clean the blades with bare hands. Use a brush.

Risk of scalding!

When processing hot milk, use a tall, narrow receptacle for blending.

Hot milk may splash and scald you.

Important!

Do not attach or remove accessories until the base unit is at a standstill.

Never use the hand blender/blender foot in the universal cutter.

The universal cutter is not microwave-safe.

Never immerse the attachment of the universal cutter in liquids and do not clean under flowing water or in the dishwasher.

Never insert the whisk into the base unit without the gear attachment.

Never immerse the gear attachment in liquids and do not clean under flowing water or in the dishwasher.

Before use, read these instructions carefully in order to become familiar with important safety and operating instructions for this appliance.

Please keep the operating instructions in a safe place.

If passing on the appliance to a third party, always include the operating instructions.

Universal cutter (for some models)

Please fold out the illustrated pages.

Fig. 

Universal cutter XL

- 1 Universal cutter
- 2 Cutter blade
- 3 Vario holder
- 4 Vario filter insert

5 Vario blade

6 Attachment

7 Lid

A universal cutter XL can be ordered from customer service (order no. 753122).

Universal cutter L

7 Lid

8 Universal cutter

9 Cutter blade

10 Ice-crusher-blade

You can crush ice with the ice crusher blade.

Optimum processing quantity: 4–6 ice cubes.

Note:

The attachment (6) of the universal cutter XL is used.

Operation



The blade is sharp and can cause injury!

The universal cutter must be completely assembled before use!

Never grip the blade in the universal cutter.

Take hold of the universal cutter blade by the plastic handle only.

Do not touch blade with bare hands.

Clean them with a brush.

Universal cutter with blade

The universal cutter with cutter blade is suitable for cutting meat, hard cheese, onions, herbs, garlic, fruit, vegetables, nuts, almonds.

With the universal cutter XL use the appliance at full power to prepare honey spread (according to the recipe see **Fig. 13**).

Always observe the maximum quantities and processing times in the table (**Fig. 13**).

Caution!

Before cutting meat, remove gristle, bones and sinews.

The universal cutter with cutter blades is not suitable for cutting very hard food (coffee beans, radishes, nutmeg) and frozen food (fruit, etc.).

Fig. 13 – with cutter blade (sizes L and XL)

Fig. 14 – with ice crusher blade (size L only)

- Place the universal cutter on a smooth, clean work surface and press.
- Insert the blade.
- Add food.

Warning!

Blade must sit straight in the universal cutter so that the attachment sits correctly (Fig. 13/14-3).

- Place the attachment on the universal cutter and rotate in a clockwise direction until it “clicks” into position.
- Place the base unit on the attachment and lock into position.
- Insert the mains plug.
- Hold the base unit and universal cutter firmly and switch on the appliance (turbo speed).
- Release the On button after processing.

After using the appliance

- Remove mains plug.
- Press the release buttons and remove the base unit from the attachment.
- Rotate the attachment in an anti-clockwise direction and remove from the universal cutter.
- Take hold of the blade by the plastic handle and take out.
- Place the lid on the universal cutter to keep in the processed ingredients.

Universal cutter with Vario set (only size XL)

The universal cutter with Vario set is suitable for cutting hard, dry food (e.g. chocolate, nuts, almonds, Parmesan) or for crushing ice cubes into small (**S**), medium (**M**) or large (**L**) pieces. The size is specified by positioning the marks **S**, **M** or **L** on the Vario filter insert when inserting it into the Vario holder.

Information and recommendations concerning settings, quantities and processing times can be found in the table (**Fig. 15**).

Fig. 15

- Place the universal cutter on a smooth, clean work surface and press.
- Insert Vario holder into the universal cutter. Pegs on the universal cutter must be located in the grooves of the holder.
- Place Vario filter insert on the universal cutter.
The marks (**S/M/L**) must be positioned above the peg of the universal cutter according to the required degree of cutting (**Fig. 15-2**).
- Insert Vario blade.
- Add food.

Warning!

Vario blade must sit straight in the Vario filter insert so that the attachment sits correctly (Fig. 15-3a).

- Place attachment on the Vario filter insert and turn clockwise until it clicks into position.
- Place the base unit on the attachment and lock into position.
- Insert the mains plug.

- Hold the base unit and universal cutter firmly and switch on the appliance (turbo speed).
- Release the On button after processing.

Note!

The universal cutter should be emptied before the cut food reaches the lower edge of the Vario holder.

After using the appliance

- Remove mains plug.
- Press the release buttons and remove the base unit from the attachment.
- Turn attachment anti-clockwise and take off the Vario filter insert.
- Take hold of the blade by the plastic handle and take out.
- Remove Vario filter insert and Vario holder.
- Place the lid on the universal cutter to keep in the processed ingredients.

Cleaning**Warning!**

Never immerse the attachment of the universal cutter in liquids and do not clean under flowing water or in the dishwasher.

- Wipe the attachment with a damp cloth only.
- Universal cutter, blade, Vario holder, Vario filter insert and lid are dishwasher-safe.

Whisk

Please fold out the illustrated pages.

Fig. 11**11 Gear attachment for whisk****12 Whisk**

A whisk can be ordered from customer service (order no. 753124).

Operation

The whisk is suitable for whipping cream, beating egg whites and milk froth (from hot (max. 70 °C) and cold milk (max. 8 °C)) as well as for preparing sauces and desserts.

**Risk of scalding!**

When processing hot milk, use a tall, narrow receptacle for blending. Hot milk may splash and scald you.

Fig. 12

- Put ingredients into the blender jug.
- Place the gear attachment on the base unit and lock into position.
- Insert the whisk into the gear attachment and lock into position.

Warning!

Never insert the whisk into the base unit without the gear attachment (Fig. 12-3).

- Insert the mains plug.
- Set required speed using the speed control (recommendation: high speed).
- Grip base unit and blender jug and press required On button.
- Release the On button after processing.

After using the appliance

- Remove mains plug.
- Press the release buttons and remove the base unit from the gear attachment.
- Remove the whisk from the gear attachment.

Cleaning**Warning!**

Never immerse the gear attachment in liquids and do not clean under flowing water or in the dishwasher.

- Wipe the gear attachment with a damp cloth only.
- The whisk can be cleaned in the dishwasher.

Subject to change without notice.

Robert Bosch Hausgeräte GmbH



Thank you for buying a Bosch Home Appliance!

Register your new device on MyBosch now and profit directly from:

- **Expert tips & tricks for your appliance**
- **Warranty extension options**
- **Discounts for accessories & spare-parts**
- **Digital manual and all appliance data at hand**
- **Easy access to Bosch Home Appliances Service**

Free and easy registration – also on mobile phones:

www.bosch-home.com/welcome

BOSCH
HOME APPLIANCES
SERVICE

Looking for help? You 'll find it here.

Expert advice for your Bosch home appliances, need help with problems or a repair from Bosch experts.

Find out everything about the many ways Bosch can support you:

www.bosch-home.com/service

Contact data of all countries are listed in the attached service directory.

Robert Bosch Hausgeräte GmbH

Carl-Wery-Straße 34

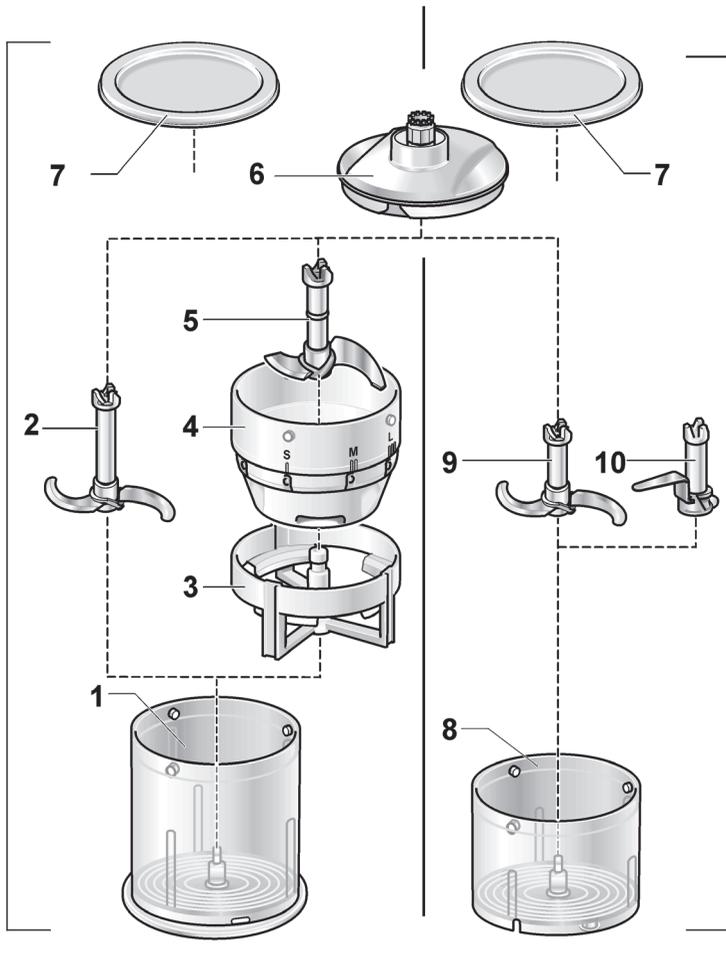
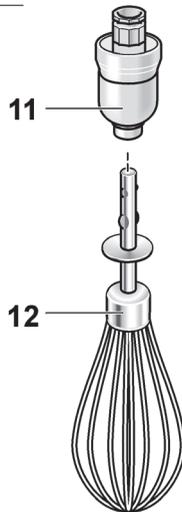
81739 München

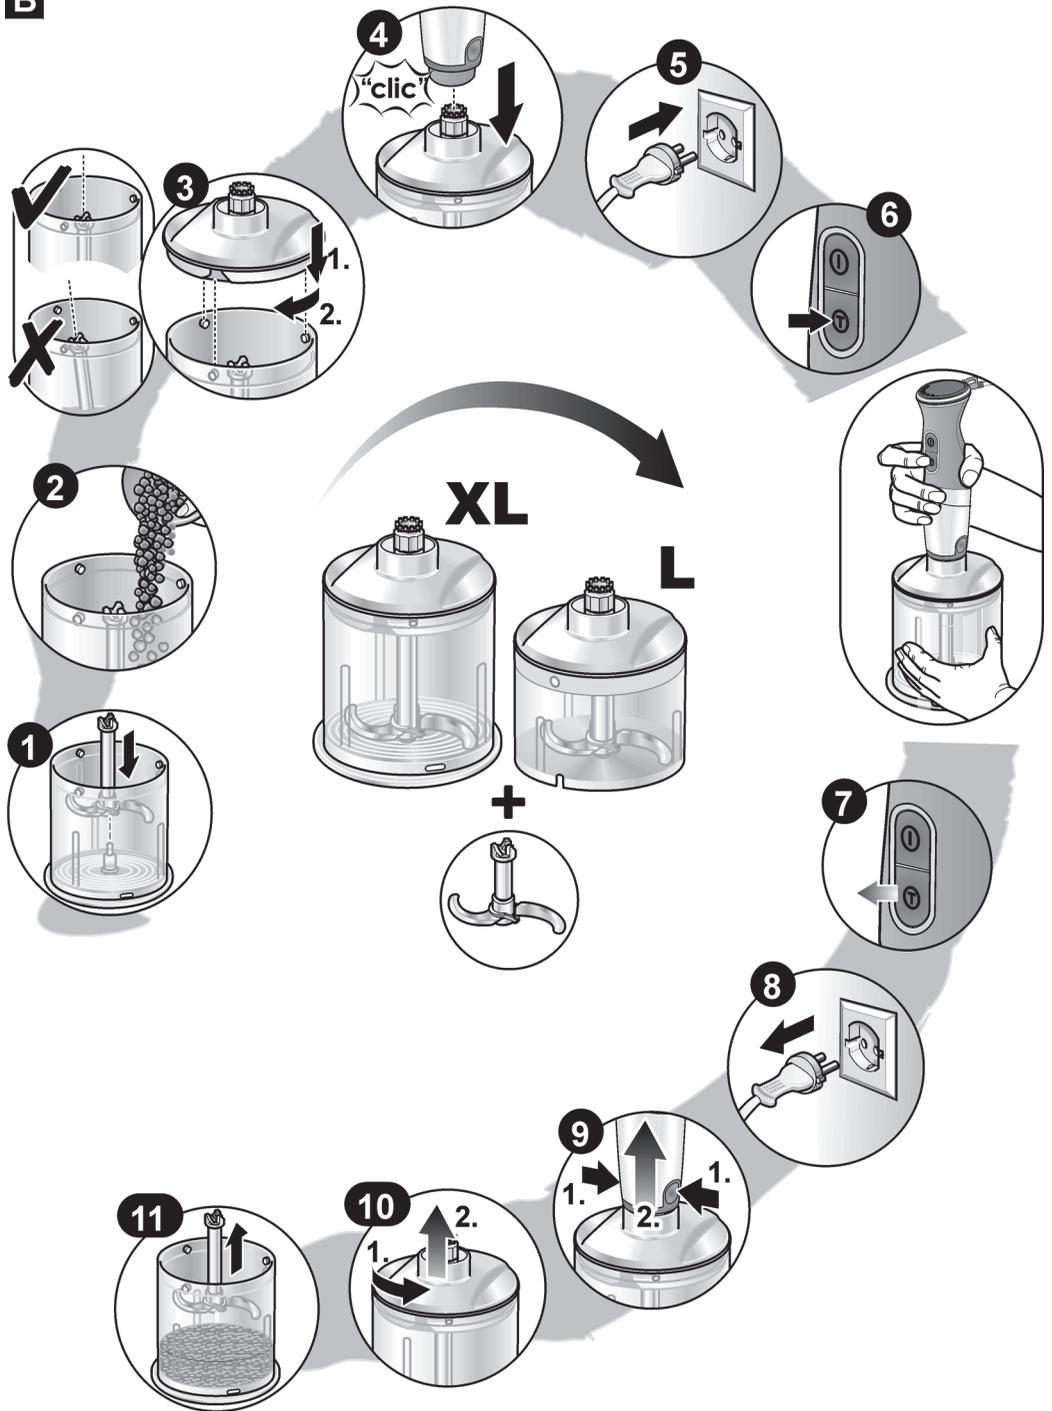
GERMANY

www.bosch-home.com

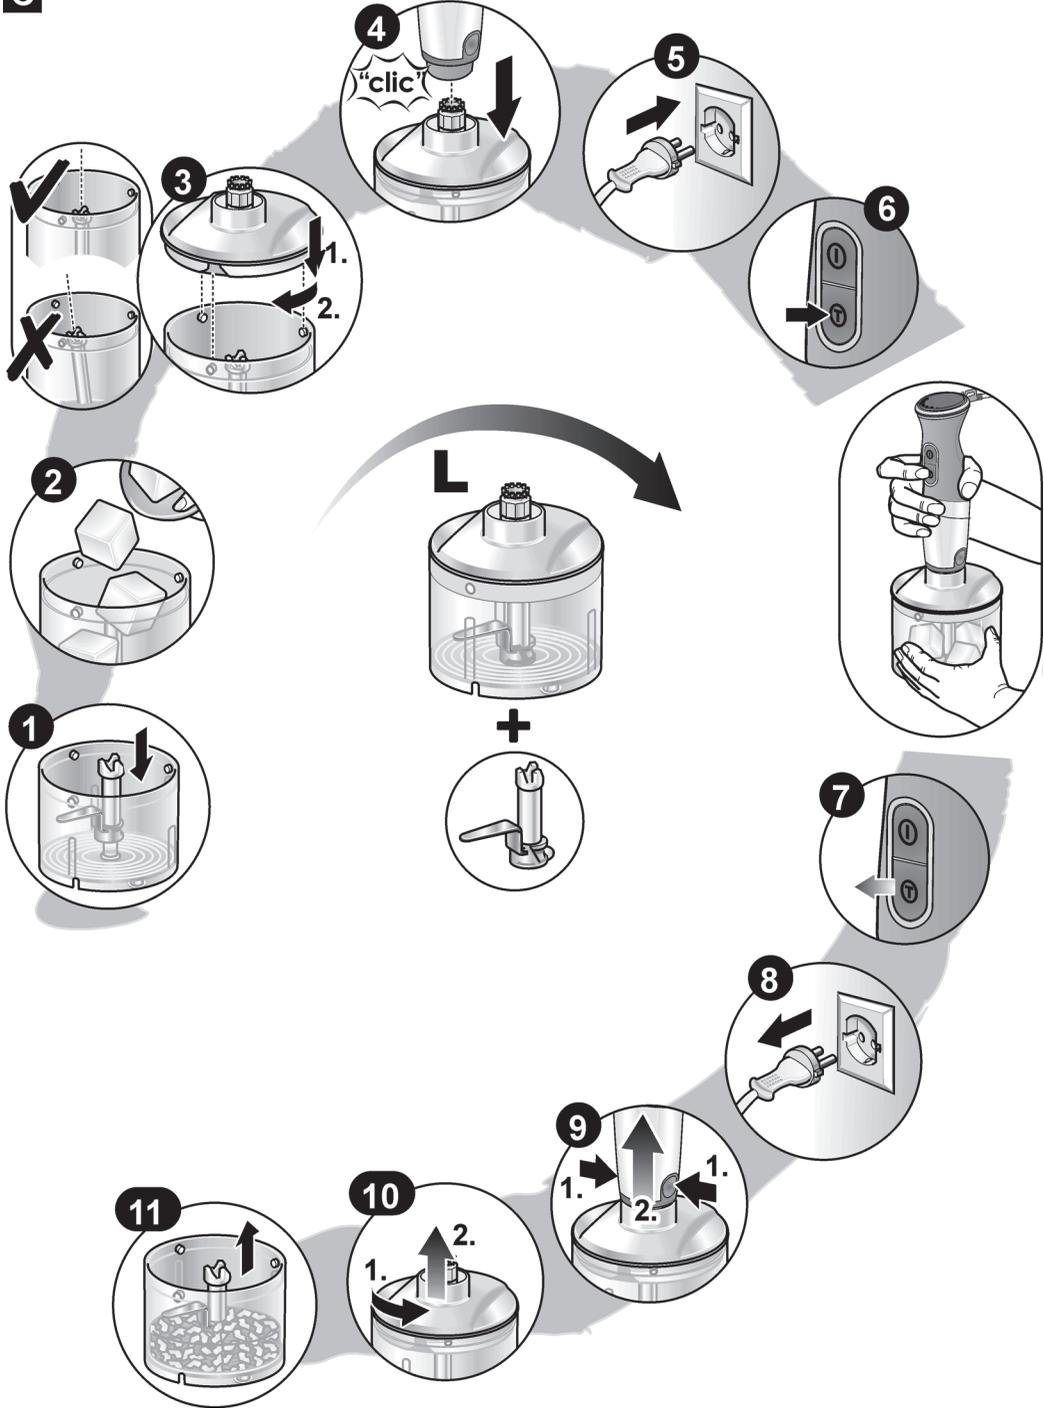


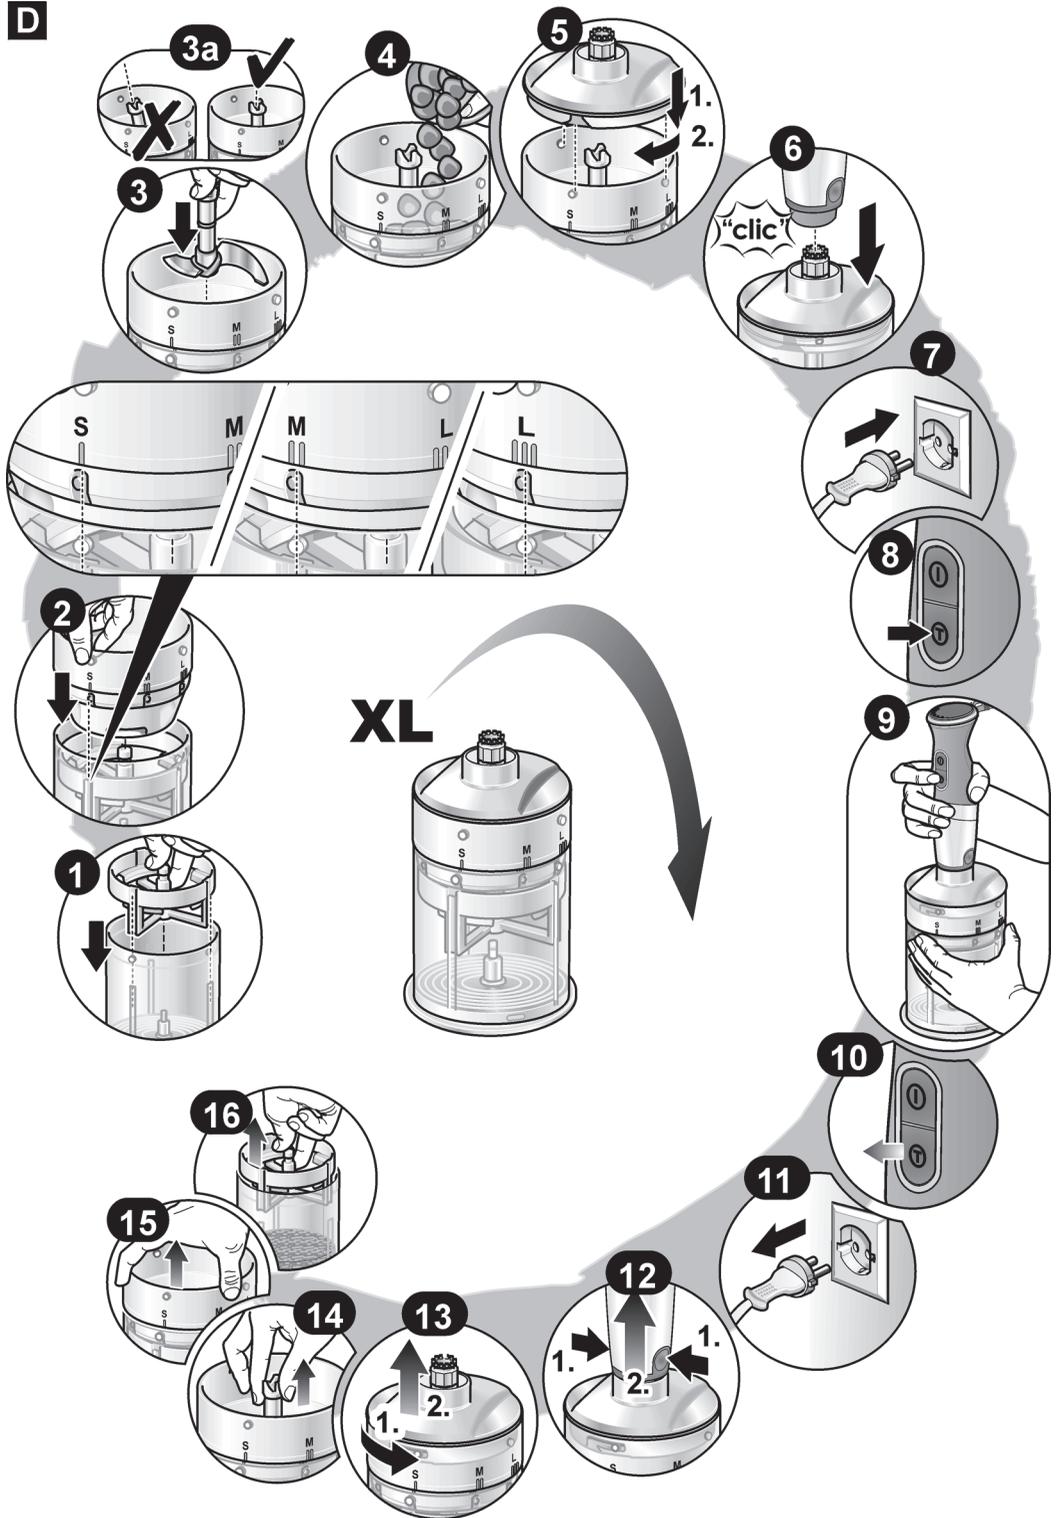
8001116069 (9810)

A**XL****L**

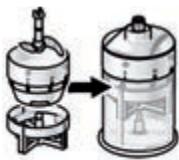
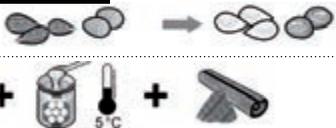
B

C



D

E

									
	✓		100 g	10-20 s	✓	✓			
	✓		100 g	(3-8) x 3 s	✓	✓	✓		
	✓		50 g	30-40 s	✓	✓	✓		
	✓		100 g	(5-7) x 2 s	✓	✓			
	✓	✓	100 g	(5-10) x 1 s	✓	✓			
	✓		150 g	30-40 s	✓	✓	✓		
	✓		150 g	30-40 s					
	✓		100 g	10-20 s					
	✓		150 g	(2-5) x 1 s					
	✓		15 g	(7-10) x 1 s					
	✓		20 x	(3-8) x 1 s					
	✓		150 g	(5-10) x 1 s					
CNHR28									
			80 g + 120 g	5 s					
CNHR29									
			30 g	30 s					
			200 g + 1 g	5 s					

F