


# ELECTRICAL VACUUM PUMP BVP130

## USER MANUAL

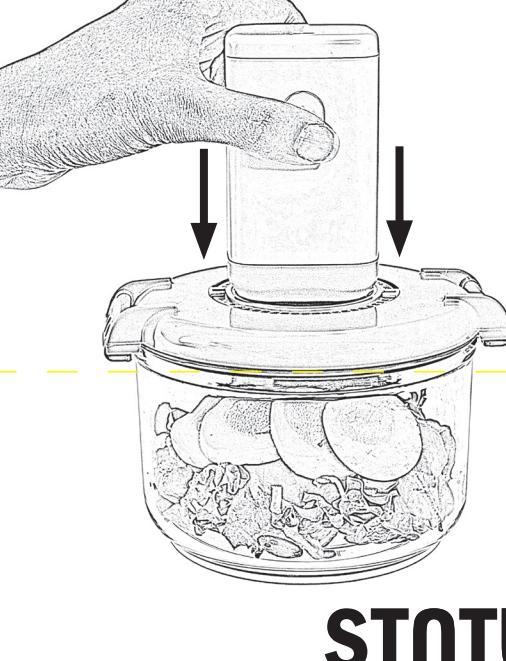

**STATUS**

innovations

### 1. SAFETY INSTRUCTIONS AND EXPLANATION OF OPERATION

#### 1.1. OPERATING CONDITIONS

The maximum surrounding temperature for normal use is +40 °C, while the average temperature during a 24-hour period must not exceed +35 °C. The lowest allowed surrounding temperature is -5 °C. Normal room temperature is most suitable. Surrounding air must be clean, relative humidity must not exceed 50 % at the maximum temperature of +40 °C. Higher relative humidity is allowed with lower surrounding temperature (e.g. 90 % at +20 °C).

#### 1.2. SAFETY INSTRUCTIONS

- a.) Choose the place for the device carefully. The surface used for the device must be dry and of normal temperature (not hot), and must not be next to a heat source (heating surface) or source of water.
- b.) Check the USB charging cable, connectors, adapter (which can be bought additionally) and plug before connecting the device to the adapter and the adapter to the plug (power supply). If you observe any defect, contact our repair service listed below.
- c.) Use the device exclusively for the purposes described in the instructions for use.
- d.) If the USB charging cable is damaged, the manufacturer, authorized repair service, or similarly qualified personnel must replace it to prevent any danger.
- e.) This device can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- f.) Children shall not play with the device. Cleaning and user maintenance shall not be made by children without supervision.
- g.) The warranty is void in the following cases:
  - An unauthorised or unqualified person attempts to repair the device.
  - The device is used for purposes other than intended.
  - Safety rules and instructions for use are not followed.
- h.) Never use the device in an explosive atmosphere.
- i.) Store the device in dry spaces at room temperature.

When correctly connected and used in accordance with the instructions, the device is not dangerous.

Electrical components use low voltage and are protected against dust.

**Read the instructions for use thoroughly before use.**

The instructions for use should be stored next to the device and always available during use.

Opening the device and accessing its interior by a user is forbidden.

The manufacturer assumes no liability for damage caused by incorrect use or by failure to comply with the instructions.

### 1.3. MAINTENANCE AND CLEANING

- a.) Before cleaning, unplug the adapter.
- b.) Store the USB charging cable and the device in a dry and ventilated place.
- c.) Use a soft, dry or slightly damp cloth to clean the device. Do not use sponges, coarse cloth, polishing agents, disinfectants, or aggressive cleaning agents that may damage the surface of the device. Never immerse the device in water or put it under running water. Never spray cleaning agents directly on the inside or outside of the device.
- d.) The device must be completely dry before use.
- e.) If liquid enters the interior of the device, consult the seller or authorised repair service.

### 1.4. REPAIR SERVICE

- a.) Only qualified and authorised personnel may perform repairs.
- b.) Only experts that can assess the task at hand and related risks, based on their technical education and knowledge of appropriate standards, can perform repairs.
- c.) Troubleshooting is performed by the manufacturer or an authorised representative.
- d.) If possible, components that need to be replaced are replaced with the original or functionally identical spare parts.

### 1.5. GENERAL INFORMATION

The electrical vacuum pump BVP130 is a vacuum packing device. It is intended to be used on Status vacuum containers, jug, lids, and stoppers thereby creating vacuum and ensuring quality vacuum storage of food in a container, jug, bottle or a jar.

The biggest advantages of vacuum storage are the following:  
 • it preserves vitamins, minerals, nutrients, and the aroma of foodstuffs,  
 • it protects food from the spread of mould and bacteria,  
 • it prolongs the shelf life of foodstuffs,  
 • food stored in vacuum containers can be refrigerated or frozen,  
 • it prevents the unpleasant mixing of odours in a refrigerator and freezer.

The use of the electric vacuum pump is simple and efficient. It allows you to store food in a completely natural and healthier way. Food remains fresh longer and you end up saving time and money.

Please read the user manual thoroughly before first use and follow the instructions. Should any questions, opinions, or comments arise, feel free to contact us by phone or mail.

This user manual is also available in electronic form at our website [www.status-innovations.eu/knowledge-base/user-manuals/](http://www.status-innovations.eu/knowledge-base/user-manuals/).

### 1.6. PRODUCT SPECIFICATION

Dimensions	Width: 55 mm Length: 55 mm Height: 112 mm
Weight	0.2 kg
Material	PC ABS plastic, silicone
Rated voltage and current	3,7 V~, Li-Ion, 800 mA
Adapter (not included)	Input: 100-240 V~, 50-60 Hz Output: 5 V~, 800 mA

### 1.7. COMPONENTS AND DESCRIPTION OF THE PRODUCT'S FUNCTIONING


The image below shows the BVP130 electric vacuum pump. It is easy to use since all you have to do is place it on top of the silicone valve and press the button .

Lights explanation:

- The indicator light alternates between red and green flashes during operation.
- A short flash of the red light signals an empty battery and indicates the pump needs to be charged.
- The pump is charged when the green light turns on.

The electric vacuum pump creates a preset vacuum pressure in a container, jug, bottle, or a jar.

The most important functions and components are indicated with numbers.

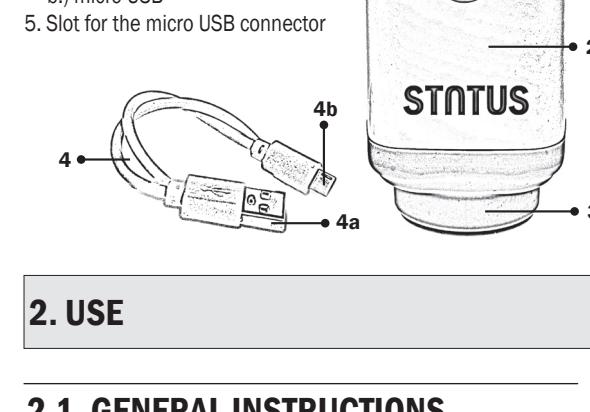

### 2. USE

#### 2.1. GENERAL INSTRUCTIONS

- a.) Upon removing the electric vacuum pump from its packaging make sure that all the component parts are included and that the device and all its component parts are fully operational. Take special care to remove all the packaging bits from the seal.
- b.) Make sure you read the user manual thoroughly before first use and follow the instructions.
- c.) The electric vacuum pump is designed for household use.

#### 2.2. INSTRUCTIONS FOR USE

- a.) The vacuum pump needs to be charged before first use.
- b.) Vacuum pack by placing the vacuum pump on the valve at the centre of the lid of a vacuum container, jug, or a vacuum stopper and press lightly.
- c.) Press  button. The pump automatically sucks the air out of the container, jug, or a bottle.
- d.) The indicator light alternates between red and green flashes during vacuum packing.
- e.) The duration of vacuum packing depends on the size of the container and the amount of food: vacuum will be created faster in a smaller container than a larger one, and in a full container than an empty one.
- f.) The pump disengages automatically when the vacuum pressure in a container reaches the preset value.
- g.) The operation of the pump can be stopped at any time by pressing the button .
- h.) If the pump's battery is empty, it will not power on upon pressing  button. The battery needs to be charged.

### 2.3. CHARGING

- a.) The electric vacuum pump usually needs to be charged before first use. Insert the smaller USB connector (micro USB) into the port at the top of the pump and the larger USB connector (USB 2.0) into an electric adapter with a USB port.
- b.) The pump can be charged by using an adapter, a portable battery (5 V~, 800 mA), or by plugging it into a USB port (USB 2.0) of a computer or a laptop. In this case the charging speed depends on the USB port's use: if the USB port is intended for data-transfer only, the battery charging will take longer, and if it is intended for charging electronic devices, the charging will be faster. It usually takes 2 to 4 hours for the pump to be fully charged.
- c.) The indicator light flashes red during the charging of the device.
- d.) The charging is complete when the indicator light changes from red to green.
- e.) To maintain the optimal functioning of the battery, charge it at least once every 3 to 6 months.

### 2.4. STORAGE OF THE PUMP

Store the pump in a dry space at room temperature, away from a heat or water source. Due to its small size it is easy to carry and suitable for use at home, on the go, or at work.

### 3. DECLARATION OF CONFORMITY

- a.) Directive on the harmonisation of the laws of the Member States relating to the making available on the market of electrical equipment designed for use within certain voltage limits  
LVD DIRECTIVE 2014/35/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL
- b.) Directive on the harmonisation of the laws of the Member States relating to electromagnetic compatibility (recast)  
EMC DIRECTIVE 2014/30/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL

EU Declaration of conformity guarantees that the machine is safe and has been inspected and tested to meet all the requirements specified in the applicable standards, directives and regulations.  
EU Declaration of conformity for CE marking is located at the seller and can be provided per customer's request.

### 4. TROUBLESHOOTING

Problem:	Solution:
The pump does not respond to pressing the button  .	• It is most likely that the pump's battery is empty. Charge the battery.
The pump does not create vacuum in a container, jug or in a container closed with a universal lid, or the vacuum does not persist.	• Check if the lid of the vacuum container, the seal, and the valve are positioned correctly. • Check if the silicone seal and the valve of the container are clean and dry. If necessary, remove the valve from the lid, clean it, and reattach it.
The pump works but it does not create vacuum in a container.	• During the vacuum packing press the pump in the dock surrounding the valve in order to create a tight seal between the pump and the area around the valve. • Check if the lid of the vacuum container, the silicone seal and the valve are positioned correctly. • Check if the silicone seal and the valve of the container are clean and dry. If necessary, remove the valve from the lid, clean it, and reattach it.
The problems encountered cannot be solved.	• You must contact the repair service. The manufacturer will assume responsibility only if you comply with instructions and do not attempt to repair the device yourself.

### 5. CORRECT DISPOSAL OF YOUR VACUUM MACHINE

When the equipment or parts of the device are no longer fit for use they must be disposed of at the industrial waste landfill in accordance with applicable regulations:

- Directive on waste electrical and electronic equipment (WEEE)  
DIRECTIVE 2012/19/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL
- Directive on the restriction of the use of certain hazardous substances in electrical and electronic equipment  
DIRECTIVE 2011/65/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL

Environmentally hazardous components and parts that were built into the device have to be disposed of at specialized sites.

The symbol on the product or its packaging indicates that at the end of its life, the product may not be treated as ordinary household waste and must be disposed of in accordance with your local authority's instructions and at properly designated sites. You can also use an official WEEE collection service provider in accordance with directive 2012/19/EU.

Separate collection of individual components of EE equipment prevents negative effects of environmental pollution and minimizes danger to human health, which may occur as a result of improper product disposal. In addition, it enables reuse and recovery of the material, thus saving energy and raw materials. For detailed information on collecting, sorting, reuse and recycling of the product contact the provider of WEEE collection services or the shop where you bought the equipment.

### 6. WARRANTY

This warranty is valid for two years from the date of purchase. Evidence of original purchase is required for warranty services, so it is important to keep your sales receipt.

This warranty only covers breakdown caused by electrical or mechanical failure. It does not cover damage caused by liquid entering the device or breakdown caused by failure to follow the manufacturer's instructions.

If you have any comments or questions concerning the functioning of the machine or warranty, please contact us:

STATUS d.o.o. Metlika  
Ulica Belokranjskega odreda 19, 8330 Metlika, Slovenia  
Customer phone: +386 736 91 230  
E-mail: [info@status.si](mailto:info@status.si)

For more information visit our website [www.status-innovations.eu](http://www.status-innovations.eu).


### 7. ELECTRIC VACUUM PUMP BVP130 SET

The set includes:

- 1 electric vacuum pump BVP130
- 1 charging cable USB 2.0/micro USB
- 1 user manual

# ELEKTRIČNA VAKUUMSKA ČRPALKA BVP130

## NAVODILA ZA UPORABO

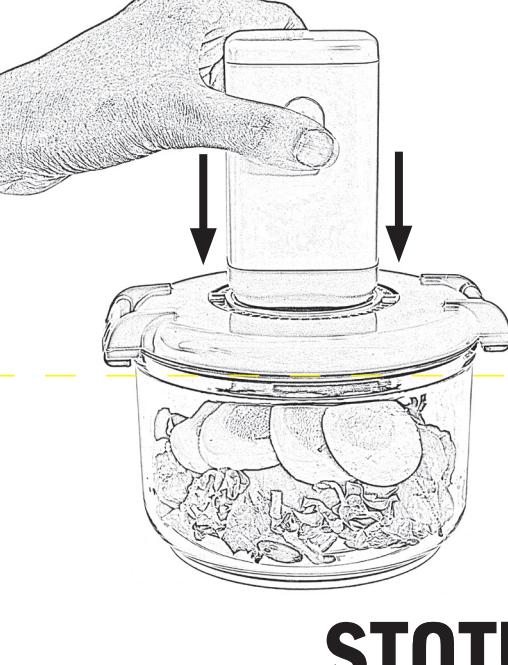

### STATUS

izvirni pripomočki

## 1. VRNOSTNA NAVODILA IN RAZLAGA DELOVANJA

### 1.1. OBRATOVALNI POGOJI

Maksimalna temperatura okolice pri normalni uporabi je +40 °C, povprečje temperatur v času 24 ur pa ne sme presegati +35 °C. Najnižja dovoljena temperatura okolice je -5 °C. Okoliški zrak mora biti čist, relativna vlažnost ne sme presegati 50 % pri maksimalni temperaturi +40 °C. Višje relativne vlage so dovoljene pri nižji temperaturi okolice (npr. 90 % pri +20 °C).

### 1.2. VARNOSTNA NAVODILA

- a.) Prostor, kjer bo naprava postavljena, naj bo izbran skrbno. Delovna površina mora biti suha in normalno temperirana (ne vroča), ne sme biti v bližini toplotnega oddajnika (npr. grelne plošče) ali vodnega vira.
- b.) Preverite USB napajalni kabel, konektorje, adapter (ki ga je potrebno dokupiti) in vtičnico, še preden priključite napravo s kablom na adapter in tega v vtičnico (električni tok). Prepričajte se, da ni kakršnih koli okvar. V primeru, da ugotovite okvaro, kontaktirajte našo servisno službo, ki je navedena v nadaljevanju navodil za uporabo.
- c.) Napravo uporabljajte izključno za namene opisane v navodilih.
- d.) Če je USB napajalni kabel poškodovan, ga mora v izogib nevarnosti zamenjati proizvajalec ali njegov serviser ali podobno usposobljena oseba.
- e.) Napravo lahko uporabljajo otroci stari 8 let in starejši in osebe z zmanjšanimi fizičnimi, čutnimi ali mentalnimi sposobnostmi ali s pomanjkanjem izkušenj oz. znanjem če so pod nadzorom ali poučeni glede uporabe aparata na varen način in da razumejo možne nevarnosti.
- f.) Otroci se ne smejo igrati z napravo. Čiščenja in vzdrževanja naprave ne smejo izvajati otroci brez nadzora.
- g.) Garancija izgubi veljavnost, če:
  - napravo poskuša popravljati nepooblaščena in nestrovna oseba,
  - uporabljate napravo za druge namene, kot je predvideno,
  - ne upoštevate varnostnih predpisov in navodil za uporabo.
- h.) Naprave nikoli ne uporabljajte v eksplozivnem ozračju.
- i.) Napravo shranujte v suhih prostorih s sobno temperaturo.

Naprava pri pravilni uporabi in ravnanju v skladu z navodili za uporabo ni nevarna. Električni deli, iz katerih je narejena, so pod nizko napetostjo in so zaščiteni pred dostopom prahu.

**Pred uporabo naprave obvezno v celoti preberite navodilo za uporabo.**

Navodila za uporabo je potrebno shraniti poleg naprave in morajo biti vedno na razpolago. Prepovedano je odpiranje naprave in poseg uporabniku v njeno notranjost.

Proizvajalec ne prevzema nobene odgovornosti za poškodbe, ki izhajajo iz nepravilne uporabe ali so posledica neupoštevanja navodil.

### 1.3. VZDRŽEVANJE IN ČIŠČENJE

- a.) Pred čiščenjem izključite adapter iz omrežja.
- b.) USB napajalni kabel in napravo shranujte v suhih in zračnih prostorih.
- c.) Za čiščenje naprave uporabite mehko, suho ali rahlo navlaženo krpou. Ne uporabljajte gobic, hrapavih krp, sredstev za poliranje, razkužil ali agresivnih čistilnih sredstev, ki lahko poškodujejo površino posameznih sestavnih delov. Nikoli ne potopite naprave v vodo ali pod tekočo vodo. Nikoli ne brizgajte čistilnih sredstev direktno po notranji niti zunanj strani naprave.
- d.) Pred uporabo mora biti naprava vedno popolnoma suha.
- e.) Če tekočina slučajno pride v notranjost naprave, se posvetujte s prodajalcem ali pooblaščenim serviserjem.

### 1.4. SERVISIRANJE

- a.) Popravila lahko izvaja le ustrezno usposobljena in pooblaščena oseba.
- b.) Popravila lahko izvajajo samo strokovnjaki, ki znajo zaradi svoje tehnične izobrazbe in izkušenj ter poznavanja ustreznih standardov oceniti dela, ki so jim bila prenesena, in z njimi povezane nevarnosti.
- c.) Odpravljanje napak izvršuje proizvajalec ali pooblaščeni zastopnik.
- d.) V kolikor je mogoče, se elementi, ki jih je potrebno zamenjati, menjajo z originalnimi oz. s funkcionalno enakimi nadomestnimi rezervnimi deli.

### 1.5. SPLOŠNE INFORMACIJE

Električna vakuumska črpalka BVP130 je naprava, namenjena vakuumiraju Statusovih vakuumskih posod, vrča, pokrovov in zamaškov, s čimer se v posodi, vrču, steklenici ali kozarcu ustvari vakuum za kakovostno shranjevanje živil.

Največje prednosti shranjevanja v vakuumu so, da:

- ohrani vitamine, minerale ter hranične snovi in aroma v živilu,
- ščiti živila pred širjenjem plesni in bakterij,
- podaljša obstojnost živil,
- živila v vakuumskih posodah lahko shranujemo v hladilniku in zamrzovalniku,
- preprečuje mešanje neprizetenih vonjav živil v hladilniku in zamrzovalniku.

Uporaba električne vakuumske črpalke je preprosta in učinkovita. Shranjevali boste popolnoma naravno, bolj zdravo, hrana bo dlje časa sveža in prihranili boste čas in denar.

**Prosim, da pred prvo uporabo navodila preberete zelo natančno in jih upoštevate. Če se pojavi kakršno koli vprašanje, mnenje ali komentar, nas poklicite ali pišite.**

Na spletnem naslovu [www.status.si/baza-znanja/navodila-za-uporabo/](http://www.status.si/baza-znanja/navodila-za-uporabo/) so dostopna ta navodila v elektronski obliki.

### 1.6. TEHNIČNI PODATKI

Mere	širina: 55 mm dolžina: 55 mm višina: 112 mm
Teža	0.2 kg
Material	PC ABS plastika, silikon
Nazivna napetost in tok	3,7 V~, Li-ion, 800 mA
Adapter (ni priložen)	Vhod: 100-240 V~, 50-60 Hz Izhod: 5 V~, 800 mA

### 1.7. SESTAVNI DELI IN OPIS DELOVANJA

Na sliki spodaj je prikazana električna vakuumska črpalka model BVP130. Njena uporaba je preprosta, saj jo samo nastavite okrog silikonskega ventila na pokrovu in pritisnete gumb .

Pojasnilo lučk:

- Indikacijska lučka med delovanjem utripa izmenično rdeče in zeleno.
- Utripanje rdeče lučke pomeni, da je baterija prazna.
- Črpalka je napolnjena, ko sveti zelena lučka.

Električna vakuumska črpalka vakuumiра posodo, vrč, steklenico ali kozarc na prednastavljen tlak.

Najpomembnejše točke in sestavni deli so označeni s številkami.



### 2. UPORABA

#### 2.1. SPLOŠNI NAPOTKI

- a.) Pri jemanju električne vakuumske črpalke iz embalaže preverite, ali ima vse sestavne dele in ali je stanje aparata ter pripadajočih delov neoporečno. Posebej boste pozorni, da delci embalaže ne ostanejo znotraj tesnila.
- b.) Pred prvo uporabo obvezno natančno preberite navodila za uporabo in jih upoštevajte.
- c.) Električna vakuumska črpalka je prilagojena uporabi v gospodinjstvu.

#### 2.2. NAVODILA ZA UPORABO

- a.) Pred prvo uporabo je potrebno vakuumsko črpalko napolniti.
- b.) Vakuumirite tako, da električno vakuumsko črpalko nastavite na ventil na sredini pokrova vakuumske posode, vrča ali na vakuumski zamašek in rahlo pritisnete.
- c.) Pritisnite gumb .
- d.) Med vakuumirom indikacijska lučka utripa izmenično rdeče in zeleno.
- e.) Čas vakuumiiranja je odvisen od velikosti posode in količine živil: manjša posoda bo vakuumiранa hitreje kot velika in polna hitreje kot prazna.
- f.) Črpalka se samodejno izključi, ko je v posodi dosežen prednastavljen podtlak.
- g.) Črpalko v delovanju lahko kadar koli izključite s pritiskom na gumb .
- h.) Če se baterija črpalke izprazni, se ob pritisku na gumb  sploh ne prične. Potrebno je polnjenje.

### 2.3. POLNjenje

- a.) Pred prvo uporabo je potrebno električno vakuumsko črpalko napolniti. Manjši USB nastavek (mikro USB, na skici 4.b.) vstavite v režo na vrhu črpalke, večji nastavek priključka USB (USB 2.0, na skici 4.a.) pa v električni adapter z USB odprtino.
- b.) Črpalko lahko polnite z adapterjem, prenosno baterijo (5 V~, 800 mA) ter s priključtvom na namizni ali prenosni računalnik v režo USB (USB 2.0). V tem primeru je hitrost polnjenja odvisna od namena reže USB: če je ta namenjena zgolj prenašanju datotek, bo polnjenje počasnejše, če je namenjena polnjenju električnih naprav, bo hitrejše. Ponavadi traja od 2 do 4 ure, da se črpalka popolnoma napolni.
- c.) Med polnjenjem naprave indikacijska lučka sveti rdeče.
- d.) Polnjenje je končano, ko indikacijska lučka spremeni barvo in sveti zeleno.
- e.) Da bi obdržali delovanje baterije v odličnem stanju, jo napolnite vsaj enkrat na 3 do 6 mesecev.

### 2.4. SHRANJEVANJE ČRPALKE

Črpalko shranjujte v suhih prostorih s sobno temperaturo, ne v bližini toplotnega oddajnika ali vodnega vira. Uporabljate jo lahko doma, na poti ali v službi, saj je majhna in lahka za prenašanje.

### 3. IZJAVA O SKLADNOSTI

a.) Pravilnik o omogočanju dostopnosti električne opreme na trgu, ki je načrtovan za uporabo znotraj določenih napetostnih mej: (Uradni list RS, št. 39/2016)

Direktiva o harmonizaciji zakonodaj držav članic v zvezi z omogočanjem dostopnosti na trgu električne opreme, ki je načrtovan za uporabo znotraj določenih napetostnih mej:

LVD DIREKTIVA 2014/35/EU EVROPSKEGA PARLAMENTA IN SVETA

b.) Pravilnik o elektromagnetni združljivosti:

(Uradni list RS, št. 39/2016 in 9/2020)

Direktiva o harmonizaciji zakonodaj držav članic v zvezi z elektromagnetsko združljivostjo:

EMC DIREKTIVA 2014/30/EU EVROPSKEGA PARLAMENTA IN SVETA

EU izjava skladnosti zagotavlja, da je naprava varna, da je bila pregledana in preizkušena ter ustreza vsem zahtevam, ki so navedene v veljavnih standardih, direktivah in predpisih.

EU izjava o skladnosti z oznako CE se nahaja pri prodajalcu in se lahko zagotovi na zahteve stranke.

### 4. NASVETI PRI MOTNJAH DELOVANJA

Motnje pri delovanju:	Pomoč:
Črpalka ne reagira na pritiskanje gumba  .	• Najverjetneje se je črpalka izpraznila. Napolnite baterijo.
Črpalka ne vakuumiira posod, univerzalnih vakuumskih pokrovov, vrča ali le-ti ne zadružijo vakuuma.	• Preverite, ali so pokrov vakuumske posode, silikonsko tesnilo in ventil pravilno nameščeni. • Preverite, ali sta silikonsko tesnilo in ventil posode čista in suha. Po potrebi ga odstranite iz pokrova, očistite in ponovno nameštite.
Črpalka dela, vendar ne vakuumiira posode.	• Med vakuumirom pritisnite črpalko v utor, da zatesnite prostor okoli ventila. • Preverite, ali so pokrov vakuumske posode, silikonsko tesnilo in ventil pravilno nameščeni. • Preverite, ali sta silikonsko tesnilo in ventil posode čista in suha. Po potrebi ga odstranite iz pokrova, očistite in ponovno nameštite.
Nastale nepravilnosti se ne dajo odpraviti.	• Obvezno kontaktirajte servis. Proizvajalec bo prezel odgovornost samo, če se držite navodil in ne izvajate popravil sami.

### 5. INFORMACIJA ZA PRAVILNO ODSTRANJEVANJE IZDELKA

Po poteku življenjske dobe je potrebno opremo ali dele naprave odstraniti iz uporabe. Odselužene dele se odvrže na deponijo za industrijske odpadke v skladu z veljavnimi predpisi:

• Uredba o odpadni električni in elektronski opremi (OEEO) (Uradni list RS, št. 55/15)

Direktiva 2012/19/EU Evropskega parlamenta in sveta o odpadni električni in elektronski opremi (OEEO)

• Pravilnik oomejovanju uporabe določenih nevarnih snovi v električni in elektronski opremi (RoHS) (Uradni list RS, št. 102/12)

• Pravilnik o spremembni pravilnika oomejovanju uporabe določenih nevarnih snovi v električni ali elektronski opremi (Uradni list RS, št. 20/14)

Direktiva 2011/65/EU Evropskega parlamenta in sveta oomejovanju uporabe nekaterih nevarnih snovi v električni in elektronski opremi

Oznaka na izdelku ali na njegovi embalaži označuje, da po koncu njegove življenjske dobe z njim ni dovoljeno ravnati kot drugimi gospodinjskimi odpadki. Vaša dolžnost je, da izrabljeno napravo predate v odstranjevanje na posebna zbirna mesta za ločeno zbiranje odpadkov v okviru vaše lokalne skupnosti oziroma zastopniku, ki opravlja dejavnost prevzemanja odpadne EE opreme.